



STEP 1

UNBOX MATTRESS ON A FLAT SURFACE

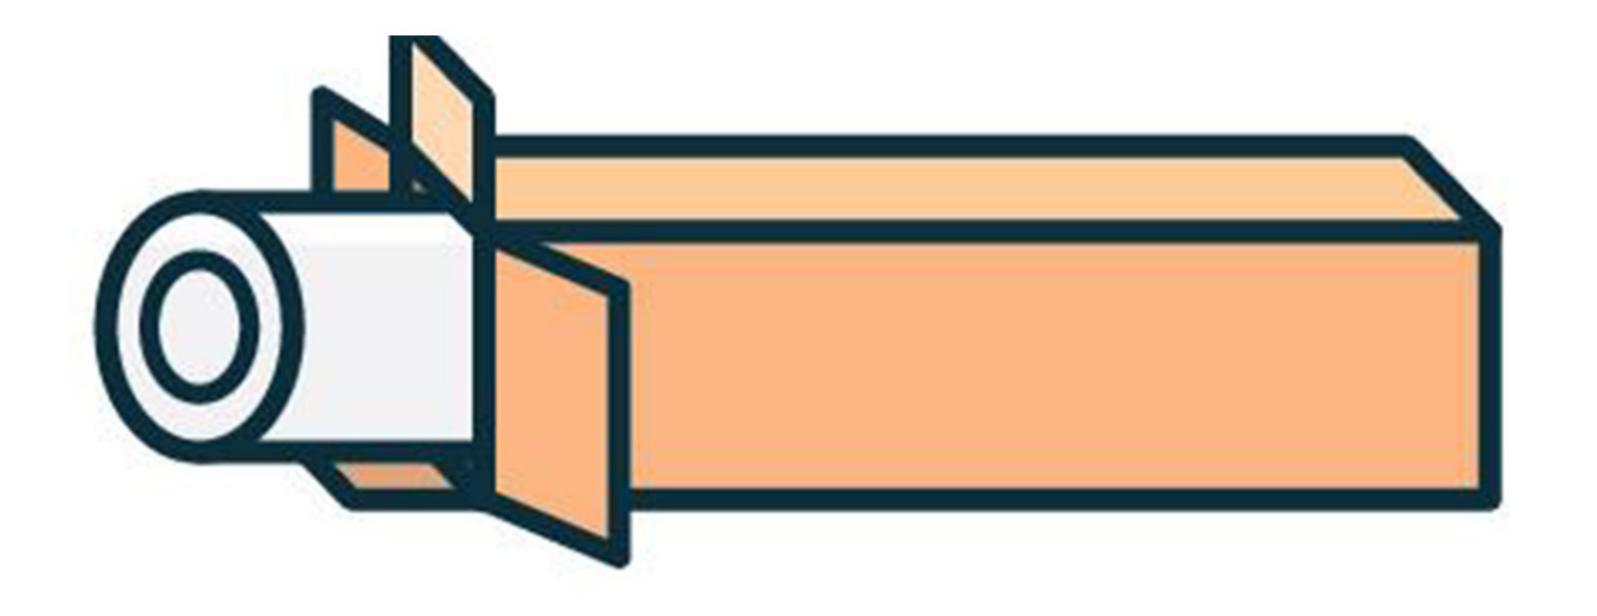


STEP 3

ROLL OUT THE COMPRESSED MATTRESS

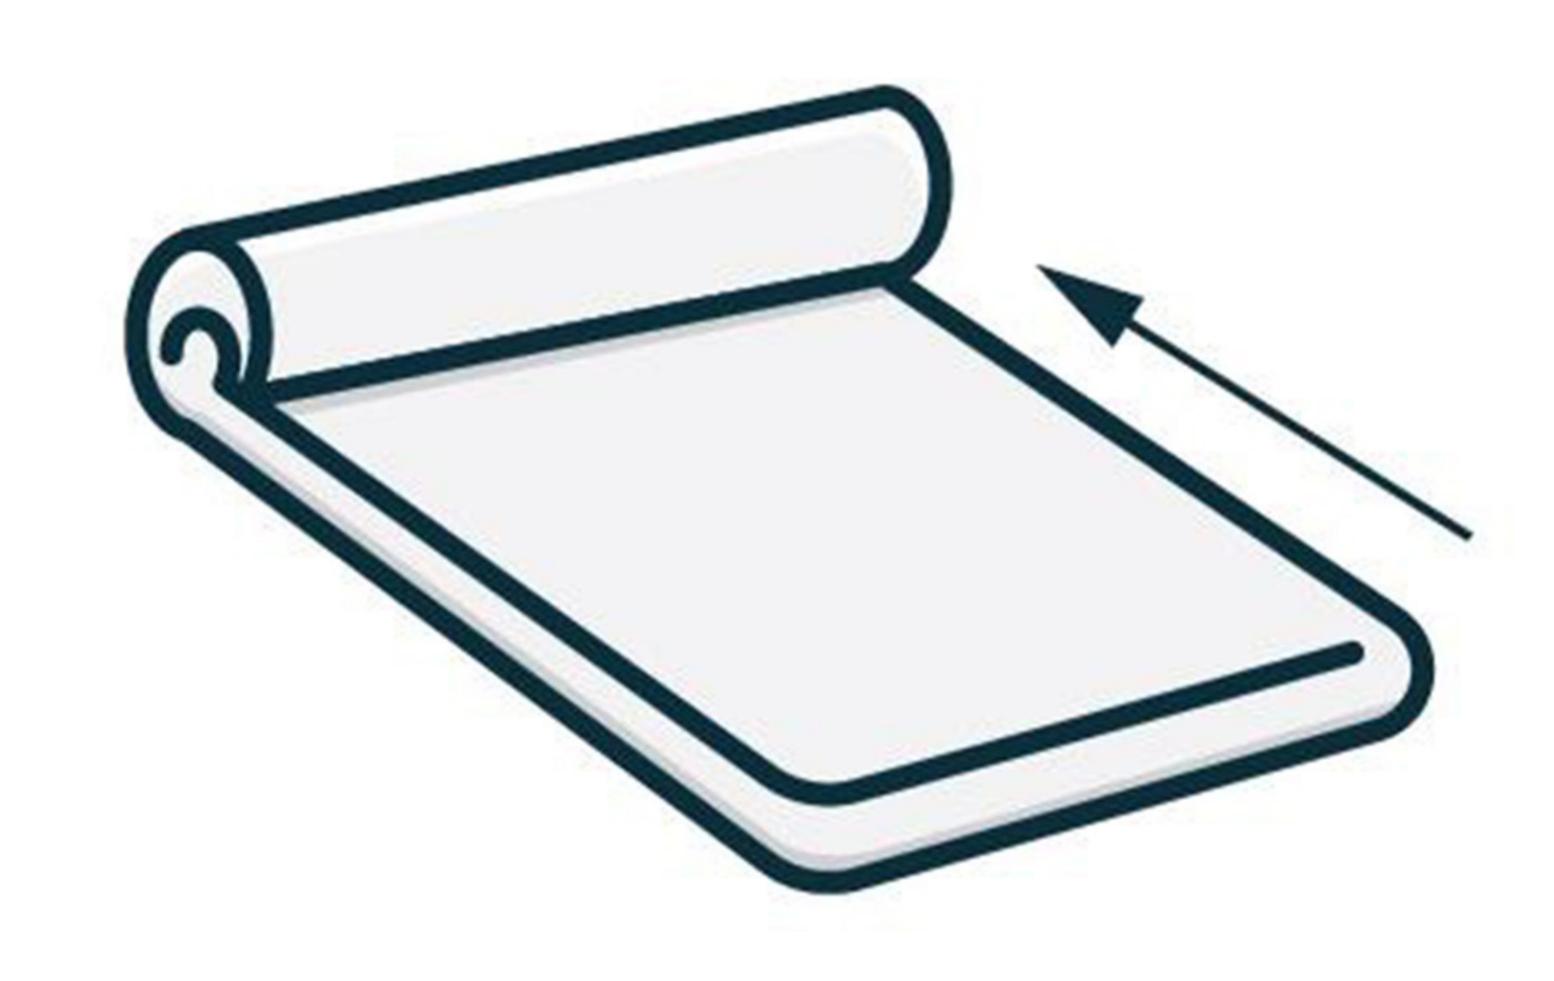


STEP 2

CAREFULLY CUT THE OUTER LAYER PLASTIC BAG

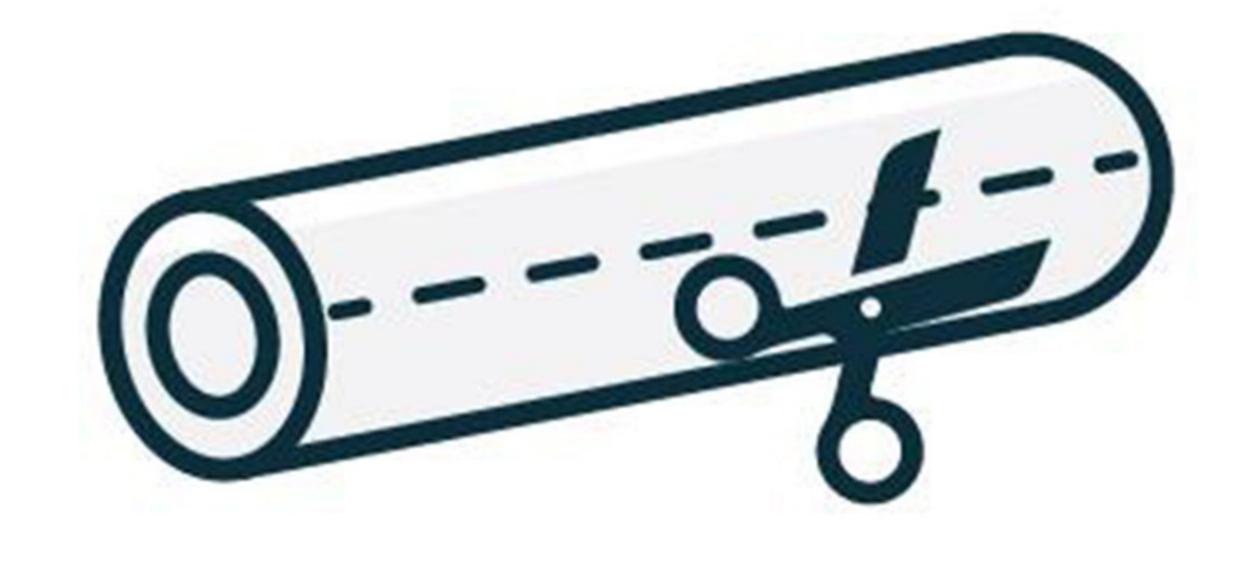

STEP 4

CAREFULLY CUT THE PLASTIC BAG ALONG THE EDGES

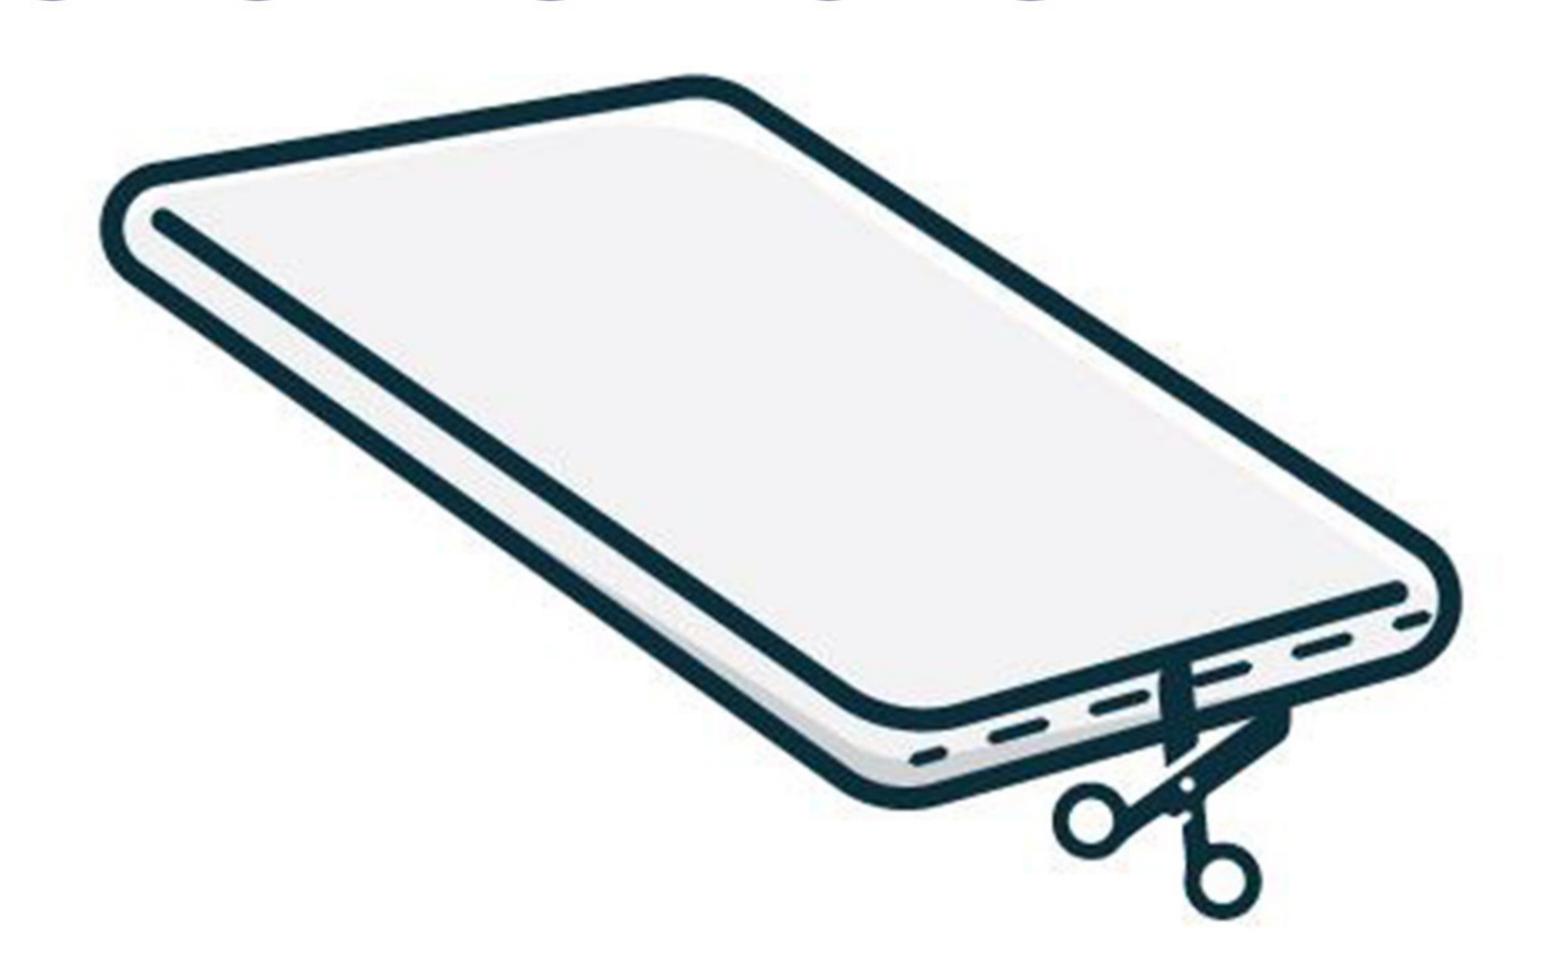

LET IT EXPAND FOR 72hrs

